



**Note:** This IBM PC BIOS API call is for DOS/Win16 personality only. Use [Family API](#) for portability.

**Note:** [osFree Macro Library](#) provides macros for most of functions

2022/03/13 05:41 · prokushev · [0 Comments](#)

# Int 14H, AH=03H

## Version

IBM 5150 and higher

## Brief

Get port status

## Family API

[DosDevIOCtl](#)

## Input

- AH = 03h
- AL = 00h (ArtiCom)
- DX = port number (00h-03h) (04h-43h for Digiboard XAPCM232.SYS)

## Return

- AH = line status (see #00304)
- AL = modem status (see #00305)
- AX = 9E00h if disconnected (ArtiCom)

## Macro

```
INCLUDE BIOS.INC
```

@AuxStatus 0

## Notes

- the 1993/04/08 Compaq system ROM uses only the low two bits of DX

## Note

Text based on [Ralf Brown Interrupt List Release 61](#)

IBM PC BIOS API	
Video I/O	<a href="#">INT 10H</a> : <a href="#">00H</a> , <a href="#">01H</a> , <a href="#">02H</a> , <a href="#">03H</a> , <a href="#">05H</a> , <a href="#">06H</a> , <a href="#">07H</a> , <a href="#">08H</a> , <a href="#">09H</a> , <a href="#">0AH</a> , <a href="#">0BH</a> , <a href="#">0CH</a> , <a href="#">0DH</a> , <a href="#">0EH</a> , <a href="#">0FH</a>
Hardware info	<a href="#">INT 11H</a> , <a href="#">INT 12H</a>
Serial I/O	<a href="#">INT 14H</a> : <a href="#">00H</a> , <a href="#">01H</a> , <a href="#">02H</a> , <a href="#">03H</a>
Tape I/O	<a href="#">INT 15H</a> : <a href="#">00H</a> , <a href="#">01H</a> , <a href="#">02H</a> , <a href="#">03H</a>
Keyboard I/O	<a href="#">INT 16H</a> : <a href="#">00H</a> , <a href="#">01H</a> , <a href="#">02H</a>
Printer I/O	<a href="#">INT 17H</a> : <a href="#">00H</a> , <a href="#">01H</a> , <a href="#">02H</a>
Disk I/O	<a href="#">INT 13H</a> : <a href="#">00H</a> , <a href="#">01H</a> , <a href="#">02H</a> , <a href="#">03H</a> , <a href="#">04H</a> , <a href="#">05H</a>
Date and Time	<a href="#">INT 1AH</a> : <a href="#">00H</a> , <a href="#">01H</a>
osFree Macro Library	
Video I/O	<a href="#">@SetMode</a> <a href="#">@SetCurSz</a> <a href="#">@SetCurPos</a> <a href="#">@GetCur</a> <a href="#">@SetPage</a> <a href="#">@ScrollUp</a> <a href="#">@ScrollDn</a> <a href="#">@Scroll</a> <a href="#">@GetChAtr</a> <a href="#">@PutChAtr</a> <a href="#">@PutCh</a> <a href="#">@SetPalet</a> <a href="#">@SetColor</a> <a href="#">@SetDot</a> <a href="#">@GetDot</a> <a href="#">@WrtTTY</a> <a href="#">@VideoState</a> <a href="#">@GetMode</a> <a href="#">@GetDisplay</a> <a href="#">@GetVideoState</a> <a href="#">@GetEGAInfo</a> <a href="#">@CIs</a>
Hardware info	<a href="#">@Equipment</a> <a href="#">@MemSize</a>
Serial I/O	<a href="#">@AuxInit</a> <a href="#">@AuxSendChar</a> <a href="#">@AuxRecieveChar</a> <a href="#">@AuxStatus</a>
Tape I/O	<a href="#">@TapeOn</a> <a href="#">@TapeOff</a> <a href="#">@TapeRead</a> <a href="#">@TapeWrite</a>
Keyboard I/O	<a href="#">@KbdStatus</a> <a href="#">@CharIn</a> <a href="#">@CharPeek</a>
Printer I/O	<a href="#">@PrnPrint</a> <a href="#">@PrnInit</a> <a href="#">@PrnStatus</a>
Disk I/O	<a href="#">@DskReset</a> <a href="#">@DskStatus</a> <a href="#">@DskRead</a> <a href="#">@DskWrite</a> <a href="#">@DskVerify</a> <a href="#">@DskFormat</a>
Date and Time	<a href="#">@SetTime</a> <a href="#">@GetTime</a>
Mouse	<a href="#">@MouInit</a> <a href="#">@MouShowPointer</a> <a href="#">@MouStatus</a> <a href="#">@MouSetPos</a> <a href="#">@MouSetMickey</a> <a href="#">@MouRegion</a>
Memory manager	<a href="#">@ModBlok</a> <a href="#">SET_BLOCK</a>

2022/10/04 14:28 · [prokushev](#) · [0 Comments](#)

2022/03/13 05:54 · [prokushev](#) · [0 Comments](#)

Family API		
DOS	Process Manager	DosBeep DosExit DosSleep DosExecPgm
	File Manager	DosChDir DosChgFilePtr DosClose DosDelete DosDupHandle DosMkDir DosMove DosQCurDir DosQCurDisk DosSetFileMode DosOpen DosQFileInfo DosRead DosQFileMode DosQFSInfo DosQVerify DosRmDir DosSelectDisk DosFindClose DosFindFirst DosFindNext DosSetFileInfo DosSetVerify DosWrite DosFileLocks DosSetFHandState DosNewSize DosBufReset DosQFHandState DosSetFSinfo
	Memory Manager	DosFreeSeg DosSubAlloc DosSubFree DosSubSet DosAllocHuge DosAllocSeg DosReallocHuge DosReallocSeg DosGetHugeShift DosCreateCSAlias
	NLS	DosCaseMap DosGetCtryInfo DosGetDBCSEv DosSetCtryCode DosGetCollate DosGetMessage DosInsMessage DosPutMessage
	Date and Time	DosSetDateTime DosGetDateTime
	Devices	DosDevConfig DosDevIOCtl DosDevIOCtl2
	Signals	DosHoldSignal DosSetSigHandler
	Misc	BadDynLink DosGetEnv DosGetMachineMode DosGetVersion DosError DosErrClass DosSetVec
KBD		KbdCharIn KbdFlushBuffer KbdGetStatus KbdSetStatus KbdStringIn KbdPeek
VIO		VioGetBuf VioGetConfig VioGetCurPos VioGetCurType VioGetPhysBuf VioReadCellStr VioReadCharStr VioScrollUp VioScrollDn VioScrollLf VioScrollRt VioScrUnLock VioSetCurPos VioSetCurType VioSetMode VioGetMode VioShowBuf VioWrtCellStr VioWrtCharStr VioWrtCharStrAtt VioWrtNAttr VioWrtNCell VioWrtNChar VioWrtTTY VioScrLock VioPopUp
Tools		BIND
Modules		DOSCALLS.DLL VIOCALLS.DLL KBDCALLS.DLL MSG.DLL
Libraries		API.LIB OS2386.LIB FAPI.LIB DOSCALLS.LIB SUBCALLS.LIB

2018/08/25 15:05 · prokushev · 0 Comments

From:

<https://ftp.osfree.org/doku/> - **osFree wiki**

Permanent link:

<https://ftp.osfree.org/doku/doku.php?id=en:docs:bios:api:int14:03>

Last update: **2022/03/26 14:30**

